319

INFLATABLE BOAT CLEANER



SAFETY DATA SHEET AVAILABLE ON REQUEST

Always refer to the descriptions on labels. Keep out of reach of children. Respect the conditions of use.

Description

- Alkaline formula concentrated in solubilizing agents, the 319 degreases and dissolves deposits of salt, dirt, traces of friction on all types of inflatable tenders (hypalon, pvc, etc.).
- The 319 can be used pure for stubborn stains such as black marks, salt deposits and dirt deposits or diluted for routine maintenance.
- The 319 cleans and renovates fenders and tenders.

Product information

Composition	Contains disodium metasilicate. Contains less than 5%: non-ionic surfactants, EDTA and salts
Appearance/ Odour	Liquid cream / characteristic
рН	>=13
Density	1.028
Flash point	>70°C (>158°F)
Transport N° ONU	3266
Storage	In its original closed packaging when not in use.
Packaging	750ml spray / 1L / 5L

Directions for use

Compatibility / supports	Inflatable tender
Méthodes	 The 319 is used diluted, 10 to 20% product in water. Apply the mixture with a sponge or brush and then rinse thoroughly with clear water.

Precautions for use

• Dangerous product, respect the instructions for use. Causes severe skin burns and eye damage. Before use: Always perform a test in a corner and in a small area. Do not breathe spray. Wash hands after handling.

